
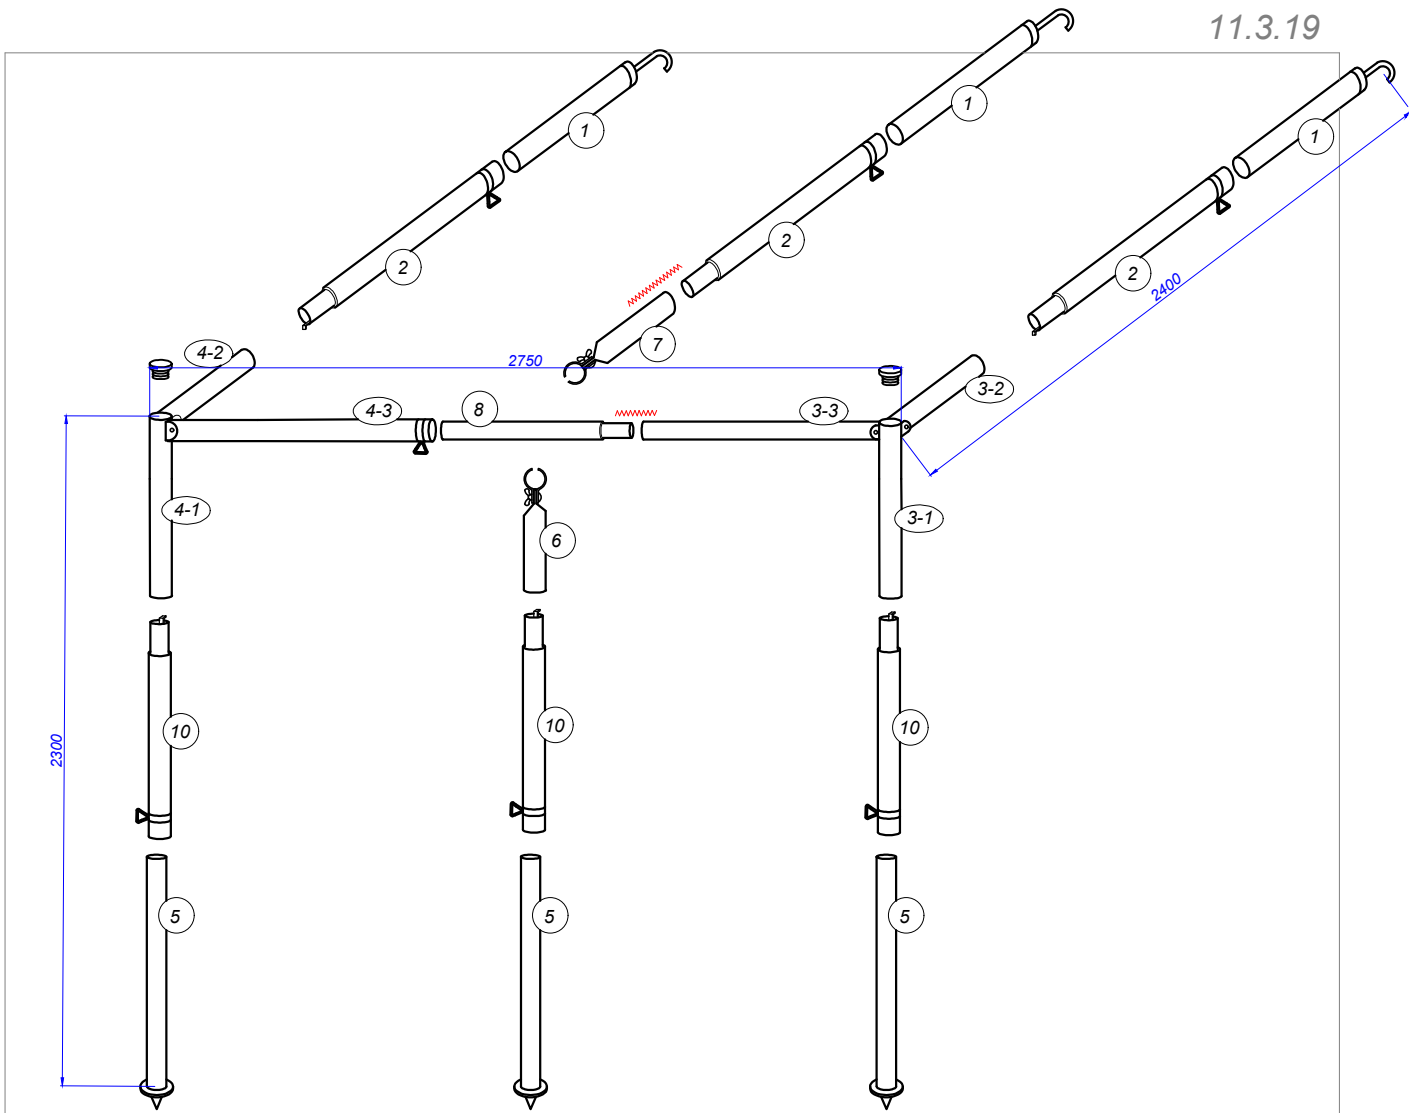
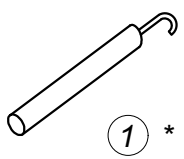

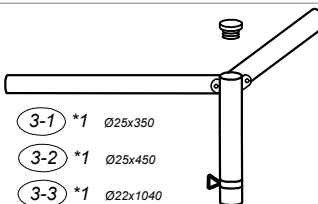
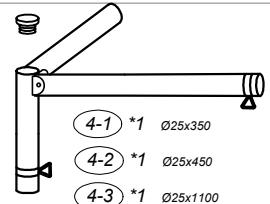








Dreibengerüst ohne Vordach
T - 202

11.3.19



List of assembling parts

 <p>① * 3 Ø22x1060</p>	 <p>② * 3 Ø25x1040</p>	 <p>③-1 *1 Ø25x350 ③-2 *1 Ø25x450 ③-3 *1 Ø22x1040</p>	 <p>④-1 *1 Ø25x350 ④-2 *1 Ø25x450 ④-3 *1 Ø25x1100</p>
 <p>⑤ * 3 Ø22x1040</p>	 <p>⑥ * 1 Ø25x1060</p>	 <p>⑥ * 1 Ø25x350</p>	 <p>⑦ * 1 Ø25x500</p>
 <p>⑧ * 1 Ø22x820</p>	 <p>⑨ * 7</p>	 <p>⑩ * 3 Ø25x1060</p>	<div style="border: 1px solid black; padding: 5px;"> <p>Scheuerschutz PVC 100 x 50 mm Loch Ø 6 mm</p> </div> <p>*2</p>